# IMC-922 HD-SDI Camera User Manual

Megapixel CMOS Box Camera



Version 1.3

#616, Mega Valley, Gwanyang 2-dong, Dongan-gu,

Anyang-si, Gyeonggi-do, 431-767, Korea

Phone: 82-31-423-9801 Fax: 031-423-9803





#### CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER. SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance(servicing) instructions in the literature accompanying the appliance

**INFORMATION** - This equipment has been tested and found to comply with limits for a Class A digital device, pursuant to part 15 of the FCC Rules & CE Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

**WARNING** - Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

**CAUTION** - To prevent electric shock and risk of fire hazards:

Do NOT use power sources other than those specified.

#### **Before You Start**

This manual should help you in the installation and set-up of the camera; and we recommend that you carefully follow the instructions described. To ensure that your warranty remains valid, please read the manual carefully before using the camera.

#### **Precautions**

- Please DO NOT disassemble, modify or repair the camera. There are no user serviceable parts inside and disassembling the camera may void the warranty. For prevention of fire or electric shock, DO NOT removes screws or covers from the camera.
- Operation in a wet environment is NOT recommended. The camera SHOULD NOT be exposed to rain or moisture.



HD-SDI camera user manual Page 3

- For prolong life and the protection of the camera's CCD, do not point the camera directly at the sun or a strong spotlight which may result in CCD blooming and permanent damage.

- DO NOT operate the camera beyond the operation temperature range stated and AVOID usage in conditions exceeding 90% humidity.
- DO NOT use an unregulated power supply source to prevent damage to the camera's circuits.
- Use soft materials such as lens tissue or cotton tipped applicator with ethanol for CCD faceplate cleaning ONLY when necessary and AVOID contact with fingers or any hard object. Do not use solvent, abrasives or detergent when cleaning the camera body.
- Warranty shall be voided for improper use of the camera caused by the user; or damage caused by other equipment due to negligence.

### Warranty

IMI TECH warrants the original components free of defects for one year from the purchase date. This warranty covers failures and damage due to defect, which may occur during normal use. It does not cover damages or failure resulting from mishandling, abuse, misuse or modification. An RMA number must be obtained in advance for every repair or replacement.

### Copyright

All the materials in this document are protected by copyright and other laws for intellectual property. They are not allowed to be copied, reproduced or modified for any use without the permission of IMI TECH. IMI TECH reserves the right to make changes in specifications, functions or designs at any time and without any notice. The company names in this document may be the trademarks and tradenames of their respective owner; and are hereby acknowledged.

Copyright © 2012 IMI TECHNOLOGY CO., LTD. All rights reserved.

#### 1. Main Features

#### ▶ 1/3" CMOS sensor

2.2M Pixels (Total) / 2.1M Pixels (Active)

#### **▶** Full HD Resolution

1920x1080@30p / 1920x1080@60i / 1280x720@60p / 1920x1080@60p

#### ▶ WDR (Wide Dynamic Range)

WDR allows a camera to filter the intense back light surrounding a subject and thus enhances the ability to distinguish features and shapes on the subject.

#### ▶ DNR (Digital Noise Reduction, 2D/3D-NR)

DNR technology will supply you with outstanding clear images by reducing noise of picture. DNR technology has excellent disk-saving effect. IMI TECH supports brilliant DNR technologies like DNR, 3D-NR and 2D+3D.

#### ► AGC (Automatic Gain Control)

AGC is circuit that automatically adjusts the incoming signal to proper level for display or recording and the sensitivity of pick-up object to render the most pleasing images. It improves performance in low light conditions.

#### ▶ 2 Auto (AE/AWB) Control

Slow Shutter control (Sens-Up), Color temperature Range (1800K ~ 10500K).

## ▶ Dynamic Motion Detection (8 separable areas, Up to 1980-blocks, variable block size control)

Motion can be detected and displayed in appointed area. It is possible to set up motion detection zones user wish.

#### ► Privacy Zone Masking (8 Polygon windows)


The privacy zone function makes it possible to make specific areas of the scene from view.

#### **▶** Output

3G-SDI / HD-SDI (NTSC / PAL)


## 2. Name and Function of Each Part

Side

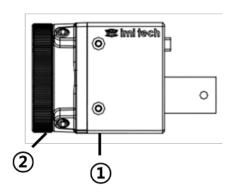


Name	Function
① Holder	For attaching a bracket to the camera
② Lens Mount	Adaptor ring is tightened for C or CS mount lens

Rear

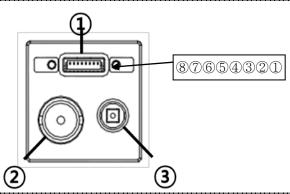

Name	Function		
① Power & I/O Port	Power Cable Connector (DC12V ~ 24V, ①-Ground ②-DC 12V) RS-485 + -(⑦⑧ pin)		
② HD-SDI Video Output	BNC connector for HD-SDI video signal output		
③ SETUP Switch	Camera function control switch  Press and hold the switch for more than 2 seconds, then the main menu will appear on the screen.		
	<b>4/</b> ▶	Move from left side to right side, then the menu is moved to upper menu or the parameter is changed	
	<b>▲/</b> ▼	Move up and down, then the menu is moved up and down	
		Press and the feature is set  Press it, then it is moved to sub menu	

#### 3. Other Device Connection

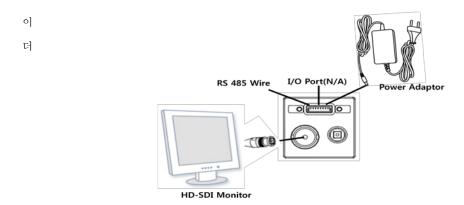

#### 3.1. Monitor Connection

Connect the HD-SDI output of the monitor to the BNC connector of the camera by Coaxial cable. If the monitor does not support HD-SDI output, you have to use HD-SDI converter. Video output type could be set as NTSC or PAL.

#### 3.2. Video Cable Connection

Refer to following table regarding the cable. If the distance between the camera and the monitor is over maximum video transmission distance, separate video amp is required to use.

\* Maximum HD-SDI transmission distance depends on cable manufacturer and installation environment.

Maximum Transmission Distance	Cable Requirement
100 ~ 140m	5C2V, 75ohm
200m	L-6CHD, 75ohm (HDTV-SDI Cable)

#### 3.3. Power Connection

For easy installation, IMI TECH provides special power cable to connect DC jack type of power adapter. Connect the camera to the device, which its power is turned off.

\* Camera operation guarantee power: DC 12V ~ 24V ±10%

#### 3.4. RS-485 Connection

Using RS-485 communication, it can be possible to control OSD menu in external device.

HD-SDI camera user manual Page 7

## 4. OSD Menu

Press the OSD joystick of cameras rear side  $1\sim2$  seconds. Then OSD menu is shown up on the screen.

	DC	INDOOR,OUTDOOR		Select DC Iris Lens(Not supported)	
1. P-IRIS		AUTO, MANUAL		Select P-Iris Lens(Not supported)	
LENS	MANUAL <b>(D</b> e	fault)		Select Manual Iris Lens	
	VIDEO			Select Video Iris Lens use(Not supported)	
		AUTO(Default)		Select Auto Shutter Speed	
	CHUTTER	FLK		Select in Flickering	
	SHUTTER	1/30~1/50000		Chutter Chard Manual Cantral	
		x2 ~ x30		Shutter Speed Manual Control	
	AGC	Level 1-15		Adjust Auto Gain Level	
2.		OFF <b>(Default)</b> , AUTO		The camera automatically detects the light level in	
EXPOSURE	SENS-UP			night or dark area	
EXI OSOILE		x2~x30		Select the level of desired Sens-up	
	BRIGHTNESS	0 ~ 100 <b>(Default: 40)</b>		Adjust the screen brightness	
	D-WDR	OFF (Default), LOW, MIDDLE, HIGH		Adjust the level of dynamic range	
	DEFOG	OFF <b>(Default)</b> ,ON		Adjust the level of defog function	
	DEFOG			Position/Size/Gradation adjustable	
	OFF <b>(Defaul</b>	t)			
	WDR	GAIN L		.ow / Middle / High	
	WDK	WDR OFFSET Se		elect the level 0~255	
		GAIN Hi		ligh / Middle / Low	
	BLC	AREA S		Select Position & Size	
3.		DEFAULT BI		BLC Factory Reset	
BACKLIGHT	HSBLC	SELECT Se		Select the area (AREA1~AERA4)	
		DISPLAY		elect the area maintain/remove (ON/OFF)	
		LEVEL Se		elect the level 0~100	
		MODE Se		lect the activation time(ALL DAY / NIGHT)	
		BLACK MASK Se		elect the black mask (ON/OFF)	
		DEFAULT H:		SBLC Factory Reset	

	ATW	Auto Tracking	White Ralance	<u> </u>		
	AIVV	Auto Tracking White Balance				
	$AWC \to$	Set the real environment white balance.				
4.	SET	Use the white color object and select SET button				
WHITE BAL	INDOOR	Select this for	Select this for indoor application			
	OUTDOOR	Select this for outdoor application Select this to fine-tune White Balance manually				
	MANUAL					
		DELAY	Select the duration time about changing the day/night mode			
	AUTO	$D \rightarrow N (AGC)$	Select the pe	ercent about changing D	Pay to Night mode(AGC based)	
5.		$N \rightarrow D \text{ (AGC)}$	Select the pe	ercent about changing N	light to Day mode(AGC based)	
DAY & NIGH	COLOR	Select the cold	or mode			
(Not		BURST	Select the bu	ust signal on/off		
Supported)	B/W	IR SMART	Adjust LEVEL(0~15) / AREA(Position & Size)			
	D/ VV	IR LED	Select On/Off(Not Available)			
		IR PWM	Select the level 0~100(Not Available)			
2DNR			Select On/Off			
6.		SMART NR	Select the Smart NR mode			
o. NR	3DNR	LEVEL	Select the le	vel of 3DNR mode(0~10	00)	
	SDINK	START. AGC	3DNR function Start percent(AGC based)(0~100)			
		END. AGC 3DNR function End percent(AGC base			sed)(0~100)	
	CAM TITLE				Enter the camera title (ON/OFF)	
		FREEZE	<u> </u>		Freeze the image (ON/OFF)	
			MIRROR		Mirror the image (ON/OFF)	
		MIRROR	V-FLIP		Flip the image vertically	
			ROTATE		Flip the image horizontally	
	D-EFFECT	D-ZOOM	x2 ~ x62 /	PAN&TILT / DEFAULT		
7.		SMART D-			ITY(0~60) / D-ZOOM(x2~x62)	
SPECIAL		ZOOM	TIME(0~26) / DEFAULT(Not Avail		able)	
	NEG. IMAG			Select the negative image (ON/OFF)		
		DIS		Not Available		
	SELECT		Select the area 1 ~ 4			
	MOTION	DISPLAY		Adjust the position & size (ON/OFF)		
		SENSITIVITY		Select the sensitivity of motion recognition(0~100)		
			V	Display masks on the motion detected area(ON/OFF)		

HD-SDI camera user manual Page 9

		DEFAULT		Motion Factory reset	
		SELECT		Select the area (1~8)	
		DISPLAY		Display the privacy area on the screen (ON/OFF)	
	PRIVACY	COLOR		Select the color 0~15	
		TRANS		Transfer 0~3	
		DEFAULT		Privacy Factory reset	
	LANGUAGE	ENG,JPN,CHN1,CH	IN2, KOR	e, GER, FRA, ITA, SPA, POL, RUS, POR, NED, TUR, HEB, ARB	
		LIVE DPC Select t		he dead pixel compensation mode in real time (AUTO/OFF) 0~100)	
	DEFECT	STATIC DPC		the dead pixel compensation mode in static points (ON/OFF) / LEVEL(0~60) / SENS-UP(x2 ~ x30)	
		BLACK DPC		the dead pixel compensation mode in black points (ON/OFF) / LEVEL(0~255) / DIFT. TH(0~255)	
		CAM ID		Select the number of camera (0~255)	
	RS485	ID DISPLAY BAUDRATE		Select the display of CAM ID (ON/OFF)	
				Select the baud rate (2400~38400)	
	VERSION Display the current Car		t Camera	a Version	
	SHARPNESS			Adjust the level of sharpness (0~15)	
	MONUTOR	LCD		GAMMA / ADAPT. LEVEL / BLUE GAIN / RED GAIN	
	MONITOR	CRT		BLACK LEVEL / BLUE GAIN / RED GAIN	
	LSC	Select Lens Shad	ding Com	pensation Scan (ON/OFF)	
8. ADJUST	RESOLUTIO	FULL-HD <b>(Default)</b> / HD			
ADJUST	FRAMERATE	A- Sensor Scanning 60P, B- Sensor Scanning 30P 60/30 & 50/25 depends on NTSC/PAL selection in advance			
		A-30/25P / A-60/50I / B-30/25P / A-60/50P			
	VIDEO.OUT	Select NTSC/PAL			
9. RESET	FACTORY	Reset the camera settings to the factory defaults			
10. EXIT	Exit the Mair	xit the Main SETUP menu(or Hidden Menu selection)			


## 5. Specifications

Items	Description		
Image Sensor	1/2.8" 2.38Megapixel Sony Exmor CMOS Sensor		
Scanning System	Progressive, Interlace		
Effective Pixels Number	1,920(H) x 1,080(V), 2.07M Pixels (Full-HD)		
Total number of pixels	1,952(H) x 1,116(V), 2.18M Pixels (Full-HD)		
Lens Mount	C/CS Mount		
V. 1 . 0 . 1 . M . 1	HD-SDI: 1920x1080p(30fps), 1920x1080i(60fps), 1920x1280x720p(60fps)		
Video Output Mode	3G-SDI: 1920x1080p(60fps)		
Video Output Level	HD-SDI, 3G-HDI / 1.0 Vp-p (75Ω, Composite)		
Video Output Level	NTSC/PAL(Selectable)		
Min. Illumination	Color: 0.2Lux @ F1.2 / B/W: 0.01@F1.2		
OSD	Built-in		
Electronic Shutter Speed	Auto / Manual ( 1/30 ~ 1/50,000 )		
White Balance	ATW / AWC / Indoor / Outdoor / Manual		
Back Light Compensation	Off / WDR / BLC / HSBLC		
D-WDR/ACCE	Low / Middle / High / Off, 0~15 steps		
AGC	0~15 steps		
Adjust	SHARPNESS / MONITOR / OSD / LSC / VIDEO OUT(NTSC/PAL)		
1	ENG, JPN, CHN, KOR, GER, FRA, ITA, SPA, POL, RUS, POR, NED, TUB, HER,		
Language	ARB(Directional Switches)		
Day & Night	Auto / B.W / Color / EXT (Selectable)		
2D/3D-NR	2DNR / 3DNR / SMART NR		
Digital Zoom / PIP	On / Off(x2 ~ x64)		
Privacy Masking	On / Off (8 Zone Selectable)		
Motion Detection	On / Off (4 Zone Selectable)		
Defect	LIVE DPC / STATIC DPC / BLACK DPC		
Defog	Low / Middle / High / Off(Position/Size- User Setting)		
Sens - up	Auto (Selectable limit ~ x30) / Off		
D - EFFECT	Freeze / Mirror / D-Zoom / NEG.IMAGE		
Protocol	Pelco-D / Pelco-P		
Communication	RS-485[ Baud Rate : 2400~38400 ]		
Dower	DC12V ~ 24V ±10%,		
Power	2.3W(1080p/30fps), 3.3W(1080p/60fps)		
Operating / Storage	-5 $^{\circ}$ C ~ +50 $^{\circ}$ C (Humidity: 0%RH ~ 80%RH)		



Temperature	-20 $^{\circ}$ C ~ +60 $^{\circ}$ C (Humidity: 0%RH ~ 90%RH)
Dimension	29mm X 29mm X 29mm (Connector, C/CS mount excluded.)
Weight	Approx. 40g

#### 6. Dimension

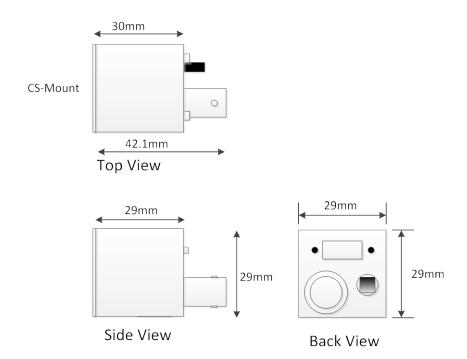

## 7. Technical Support

IMI ensures the conformity of our product to be reliable and free from defects during manufacturing by testing all the cameras before release. However, unexpected problems and technical issues may come up due to the complexity of the product. In case you require technical support; contact the agent near you or contact IMI directly at the following locations:

Address: #616, Mega Valley, Gwanyang 2-dong, Dongan-gu, Anyang-si, Gyeonggi-do, 431-

767, Korea

Telephone Number: +82-31-423-9801

Fax Number: +82-31-423-9803

Webpage: <a href="http://www.imi-tech.com">http://www.imi-tech.com</a>

Technical Support : <a href="mailto:support@imi-tech.com">support@imi-tech.com</a>

In case of an RMA, you must first contact IMI and obtain an RMA Number before sending the product to us. We are not responsible for any problems caused by not following the RMA procedure.